



Unique Transport Products LLC



*UTP BRIGGS & STRATTON  
GENERATOR LIFT  
CART®*

**USER AND OWNER MANUAL**



Thank you for purchasing this generator lift and transfer cart. You will be pleased with the task of moving generators and equipment around with minimum effort and generator safety. Please feel free to call us toll free with any questions.

Table of Contents:

- 1) Assembly
- 2) Using the UTP Briggs & Stratton Lift Cart
- 3) UTP Briggs & Stratton Lift Cart Limited Warranty
- 4) Disclaimer, Limitation of Liability and Indemnification



## 1) SECTION 1 – ASSEMBLY



The UTP Briggs & Stratton Lift Cart comes shipped with the following pieces:

- 1.) 1 – Handle
- 2.) 2 – Wheel assemblies
- 3.) 1 – Crossbar and pins
- 4.) 2 – B&S vertical generator lift brackets
- 5.) 3 – straps (1 yellow and 2 blue)



Slide the left and right wheel assembly into the handle assembly. Slide the assemblies all the way into the handle. Tighten knobs for a rigid connection.



Your final assembled UTP Briggs & Stratton Lift Cart is now ready for use.

See **section 2** for using the UTP Briggs & Stratton Lift Cart.



**2A) SECTION 2 – USING THE UTP BRIGGS & STRATTON LIFT CART**



Straddle UTP Briggs & Stratton Lift Cart over generator as shown.



Insert crossbar into front generator shipping holes. Install cotter pins to secure bar.



Once the crossbar is securely in place, insert blue straps on each side of rear shipping holes of the generator and up to the side bracket holes of the lift cart as shown.







**Push down on handle** and pull down on blue straps at the same time. **The lower you push the handle down, while pulling down on the blue straps, the higher the generator clearance off the ground.**

If you have any questions how this works, please review our infomercial on the UTP website or call us toll free at 877-421-0203.



The generator is now ready to be moved and positioned over the base. Site conditions warrant the use of the UTP Briggs & Stratton Lift Cart.

**Please use extreme caution when moving generator.**

**Be careful doing this move and keep hand away from handle.**



Center the generator over base. **While keeping down pressure on the handle, let tension out of blue straps. Please use caution when letting tension out of straps.** Remove hooks at side of generator. Remove front crossbar and pull UTP Briggs & Stratton Lift Cart away. Generator should be ready for electrical and mechanical installation.



**2B) - Installation Instructions for GE / Briggs & Stratton vertical generators  
(8kw model only)**




Install crossbar through wheel assembly and through supplied bracket assembly as shown. This bracket will slide between the generator and the plastic base.

This assembly is specifically designed to move and support Briggs & Stratton generators.



Insert the second bracket piece into the first assembly so the steel lip is between the generator and the plastic base.

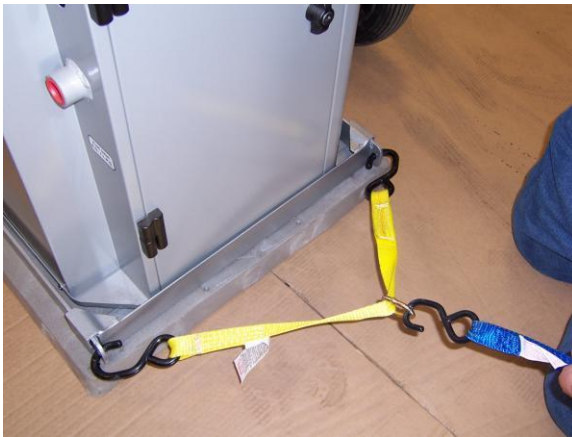

Install the yellow strap into the holes of the Briggs & Stratton assemble as to lock all pieces together.

Attach one end of the blue strap to the yellow strap and the other ends to the handle assemble.





Using the same technique as described on the horizontal generators, pull down on the handle and pull down on the blue strap at the same time. This will lift the generator onto the UTP cart. You are now ready to move the generator onto the prepared pad.

Caution: When releasing the tension on the blue strap, use extreme caution. Hold the handle down with slight pressure so it does not spring up on you!

### **Section 3 –UTP Briggs & Stratton Lift Cart Limited Warranty**

Unique Transport Products LLC warrants the UTP Briggs & Stratton Generator Lift Cart against defective components or workmanship for 1 year. Wheels and harness assemble warranted for 90 days. Warranty does not cover lift cart abuse, exposed to weather or general ill-treatment of cart other than what it was designed for.

The UTP Briggs & Stratton Generator Lift Cart is designed to lift and move Briggs & Stratton, GE, and Milbank style air cooled home standby generators weighing up to 700 lbs.





#### **4) Disclaimer, Limitation of Liability and Indemnification**

##### **Trademarks**

The term "UTP Briggs & Stratton Generator Lift Cart" and "Unique Transport Products LLC" are trademarks, and UTP Briggs & Stratton Generator Lift Cart logos and all related product and service names, designs, and slogans are the trademarks or service marks of Home Power Systems LLC. All other product and service marks on the Unique Transport Products web site are the trademarks of their respective owners.

##### **Disclaimer, Limitation of Liability and Indemnification**

You agree to indemnify and hold harmless UNIQUE TRANSPORT PRODUCTS (UTP) and HOME POWER SYSTEMS LLC, its affiliates, agents, third-party information providers, merchants, licensors and others involved in the delivery of the UTP BRIGGS & STRATTON GENERATOR LIFT CART or the delivery of products, services or information over the UNIQUE TRANSPORT PRODUCTS web site, and their respective officers, employees and directors, from and against any and all liabilities, expenses, damages, and costs including reasonable attorney's fees, resulting from the use of the UTP BRIGGS & STRATTON GENERATOR LIFT CART. The UTP BRIGGS & STRATTON GENERATOR LIFT CART is to be used only for the moving of Briggs and Stratton, GE, and Milbank style, air cooled home standby generators weighing less than 700lbs. Any other use of the UTP BRIGGS & STRATTON GENERATOR LIFT CART will void any warranty implied. Extreme caution is required when moving generators. UNIQUE TRANSPORT PRODUCTS is not liable for any injuries that may occur when assembling, moving generators or disassembling the UTP BRIGGS & STRATTON GENERATOR LIFT CART. UNIQUE TRANSPORT PRODUCTS is not liable for damage that may occur to the generator when using the UTP BRIGGS & STRATTON GENERATOR LIFT CART. UNIQUE TRANSPORT PRODUCTS is not liable for yard, lawn or landscape damage that may occur when using the UTP BRIGGS & STRATTON GENERATOR LIFT CART.

##### **Contact**

Please contact us at **Unique Transport Products, 1-877-421-0203** or e-mail to [www.generatorliftcarts.com](http://www.generatorliftcarts.com) if you become aware of any content that you believe to be in violation of these Terms of Services including without limitation, claims that any content on the Unique Transport Products infringes the copyright of a third party.

